



## **ABB** industrial drives

DCS880 modules 10 Hp to 4000 Hp Catalog



Scalability.
Reliability.
Functional safety.
DCS880 series.

## **Table of contents**

004	Creating a safer environment
006	What does all-compatible
800	Cost and time savings
009	Flexibility to serve every application
010	Type code
011	Environmental conditions
012	DCS880 power converter modules
013	Ratings, types and voltages
014	Current ratings
016	Components overview of converter
020	Standard interface and extensions for comprehensive connectivity
022	Interface option modules
023	Communication option modules
024	Flexible connectivity to automation networks
025	Integrated safety simplifies configuration
026	Common features throughout the whole DCS880 product family
027	Standard DCS880 drives software with versatile features
028	The all-compatible DCS880 series
029	Drive application programming based on IEC standard 61131-3
030	Intuitive human-machine interface
031	PC tool for easy startup and maintenance
032	External field supply
034	Fuse connections
035	Line reactors L1
036	Contactors
037	High power configurations
039	A lifetime of peak performance
040	Services
042	ABB Automation products
043	Save time, ease troubleshooting and improve drive performance with ABB smartphone apps

044

Plus codes

# Creating a safer environment without compromising productivity

The all-compatible drives are designed to provide customers across industries and applications with unprecedented levels of compatibility and flexibility.

### DC drives

Our DCS880 industrial drives are customized to meet the precise needs of industries such as oil and gas, mining, metals, cement, non motoric, material handling, pulp and paper, rubber and plastics, marine, water and wastewater, food and beverage and automotive. They control a wide range of applications such as cranes, extruders, winches, winders, conveyors, mixers, millstands, centrifuges, test benches, elevators, electrolysis, kiln.



### DC motor control

ABB's motor control technology provides precise speed and torque control for all applications.



### Adaptive programming

Adaptive programming is ideal for creating simple control programs for various applications. It does not require expertise in programming and is offered as a standard in all-compatible drives.



### Removable memory unit

Stores all the firmware and parameter configurations in an easily replaceable and simple-to-install module.



### All typical DC configurations

DCS880 standard firmware supports all standard configurations present in DC drive applications such as 6-pulse, 12-pulse parallel, serial and serial sequential, 24-pulse, M3, M6 and field reversal.




### Remote monitoring

With a built-in web server, NETA-21 makes world-wide access easy for industry applications.



### Drive-to-drive link

Allows fast communication between drives including master-follower configurations as standard.

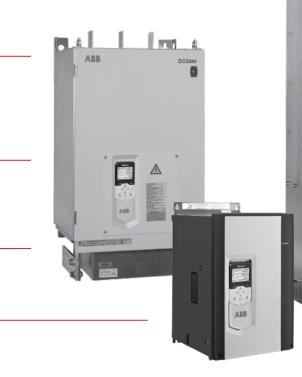

### Drive application programming

Customizable to meet the precise application needs based on IEC 61131-3. Uses the same programming environment and is also easy to integrate with other ABB components such as PLCs and HMIs.



### Safety

DCS880 offers safe torque off (STO) built in as a standard. It can be used in safety functions up to SIL3 /PLe enabling you to achieve every safety requirement.



### Drives going mobile

We offer several smartphone applications to ease and enhance the use of ABB drives. These tools provide a user-friendly and easy-to-use approach for the commissioning, servicing and use of ABB drives.







### Intuitive human-machine interface

User-friendly, high-contrast and high-resolution display enabling easy navigation in multiple languages. Allows USB and Bluetooth connection.



### Startup and maintenance tool

Drive composer PC tool for drive startup, configuration and daily use and process tuning. PC tool is connected to the drive via Ethernet or USB interface.



## Communication with all major automation networks

Fieldbus adapters enable connectivity with all major automation networks.



### Flexible product configurations


Drives are built to order with a wide range of options. Ready made cabinets with or without transformer are available up to 20 MW.



### **Extended connectivity**

In addition to the standard interfaces, the drive has three built-in slots for additional input/output extension modules and speed feedback interfaces.

# What does all-compatible mean for you?

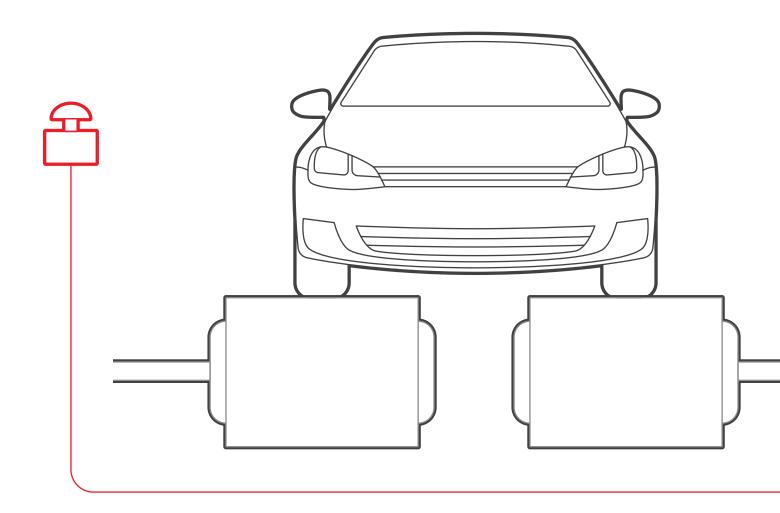

### **Business all-compatible**


The all-compatible drives are not just equipment – they are part of your business strategy. Providing better control over your processes, our drives mean lower energy consumption, improved productivity, flexibility and ease of use. In addition to drives, we offer a wide range of products and services to support your business. With offices in over 90 countries and a global technical partner network, we are in a good position to offer technical advice and local support, worldwide.


### Process all-compatible

The drives are compatible with all kinds of processes. They control virtually any type of DC motor, provide extensive input / output connectivity and support all major fieldbus protocols. The drives cover a wide voltage and power range. Control performance is scalable from basic to demanding applications. The flexibility and scalability of the drives enable one drive platform to control virtually any application or process, making your drive selection easy.

### **Environment all-compatible**

There is increased demand for industries to reduce their impact on the environment. Our drives can help you reduce energy consumption in a wide range of applications. Keeping and upgrading of existing equipment reduces the impact a modernization of a production line would have in terms of use of materials and energy for production and transport of new equipment.

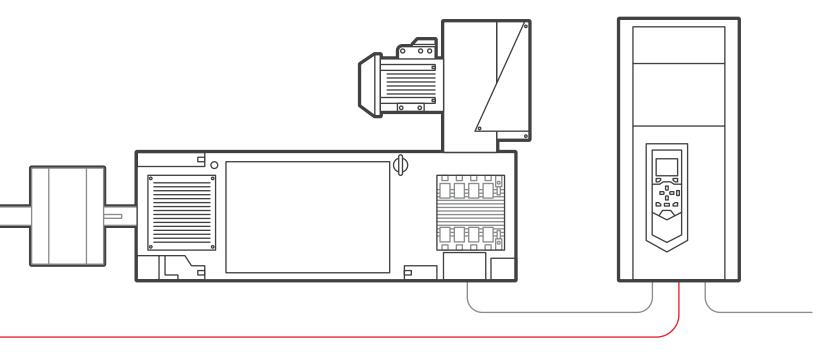



### Human all-compatible

All our drives share easy-to-use interfaces, saving you time during drive commissioning and maintenance. When you have learned it once, you can use it with all the drives in our all-compatible drives portfolio.

The control panel supports over 20 languages. With the PC tool, you get extensive drive monitoring capabilities and quick access to the drive settings. Integrated and certified safety features provide safety for machine operators.

To further improve the user experience, we have developed mobile apps that can be utilized in interacting with the drive. These apps give you an easy graphical interface for management, maintenance and service of your drives.

## **Cost and time savings**

# with Drive-based functional safety

DCS880 drives have a safe torque off (STO) function built in as a standard. With our DCS880 drive, you can achieve SIL3 /PLe safety level with certified safety functions modules. The safety module is easy to integrate inside the drive and offers you several safety functions. Integration with automation systems is quick and reliable using PROFIsafe connectivity.

#### STO built in

The SIL3 /PLe certified Safe Torque OFF (STO) functions prevents the motor from generating torque. This allows machine interaction to be performed without complete shut down of the machine.

### Scalable safety with PROFIsafe and safety PLC


The safety functionality can be scaled to your needs. From a safety module integrated into a single relay to a complete safety system with a PROFIsafe and a safety PLC, eg, AC500-S.

### Safely limited speed

The SIL3 /PLe certified safely-limited speed (SLS) function prevents the motor from exceeding a defined speed limit. This allows machine interaction to be performed at a safe speed without stopping the process.

### TÜV-certified safety design tool

Functional safety design tool (FSDT-01) is used for machinery safety. It helps to increase the safety of users in the vicinity of machines. You can perform functional safety modeling, design, calculations and verification for machine functional safety.

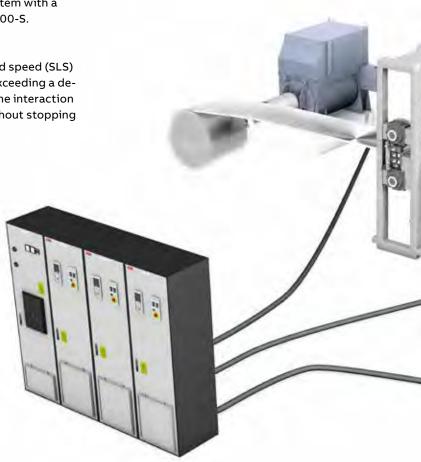


## Flexibility to serve every application

# with Drive-based adaptive and application programming

The built in PLC capability of the DCS880 provides you a possibility to customize the drive for your application without the cost of extra hardware. As programming is based on the IEC 61131-3 standard used in AC500 PLCs and by many other PLC vendors, you do not need to re-train your staff. By decentralizing your machine control closer to the process, you achieve better control performance.

### Adaptive programming

Adaptive programming is ideal for creating simple control programs for various applications. By graphical drag and drop programming it does not require expertise in programming and is offered as standard in all-compatible drives.

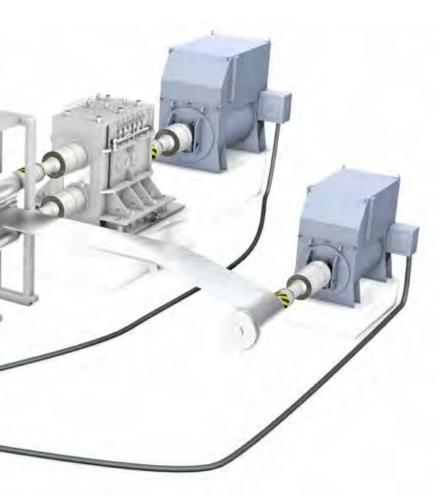

### **Application programming**


Application programming makes it possible for system integrators and machine builders to integrate their desired functionality and know-how directly into the drive. It utilizes standard IEC 61131-3 programming used by many PLCs like the AC500. This means that programs can be easily moved from the drive to a PLC and extended into a larger system.

### **Automation Builder**

Automation Builder is an integrated software suite for automation engineering, which makes programming industry devices such as drives, PLCs, robots and human-machine interfaces (HMIs) easy using one integrated engineering suite. Automation Builder is used both for engineering devices and entire automation projects.

# Type code



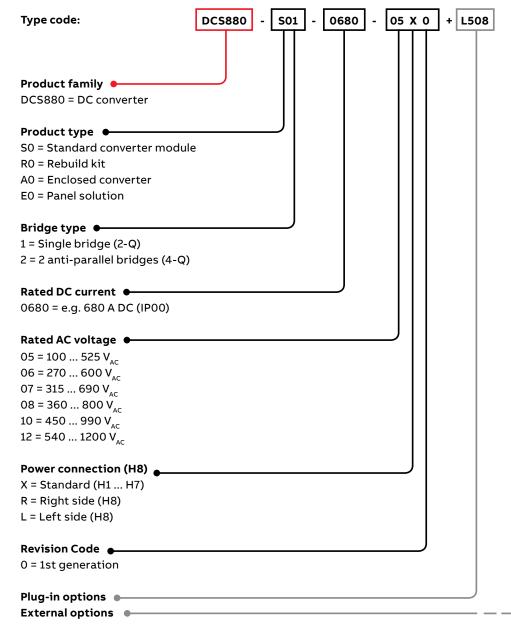

### **Environmental conditions**

System connection	
Voltage, 3-phase:	100 to 1000 V acc. to IEC 60038
Voltage deviation:	±10 % continuous; ±15 % short-time *
Rated frequency:	50 Hz or 60 Hz
Static frequency deviation:	50 Hz ± 2 %; 60 Hz ± 2 %
Dynamic: frequency range:	50 Hz: ± 5 Hz; 60 Hz: ± 5 Hz
df/dt:	17 % / s
* = 0.5 to 30 cycles.	
<b>Please note:</b> Special consideration mutive mode.	ust be taken for voltage deviation in regenera-
Degree of protection	
Converter module and options (line chokes, fuse holder, field	
supply unit, etc.):	IP 00
Enclosed converters:	IP 20/21/31/41/54
Paint finish	
Converter module:	Body RAL 7012;
	Cover RAL 9017 & RAL 9002

Environmental limit values	
Permissible cooling air temperat.	
• at converter module air inlet:	0 to +55°C
with rated DC current:	0 to +40°C
with different DC current:	+30 to +55°C
• Options:	0 to +40°C
Relative humidity (at 5 +40°C):	5 to 95 %, no condensation
Relative humidity (at 0 +5°C):	5 to 50 %, no condensation
Change of the ambient temp.:	< 0.5°C / minute
Storage temperature:	-40 to +55°C
Transport temperature:	-40 to +70°C
Pollution degree (IEC 60664-1, IEC 60439-1):	2
Site elevation	
<1000 m above M.S.L.:	100 %, without current reduction
>1000 m above M.S.L.:	with current reduction

### Sound pressure level

Vibraciones	L <sub>p</sub> (1 m distance)	Sound pressure leve	Size
as module	enclosed conv.	as module	
	68 dBA	55 dBA	H1
2 mm 2 0 Hz	72 dBA	55 dBA	H2
3 mm, 2 9 Hz 1 g, 9 200 Hz	78 dBA	60 dBA	H3
1 9, 0 200	77 dBA	66 70 dBA, depending on fan	H4
		75 dBA	H5
0.3 mm, 2 9 Hz	78 dBA	73 dBA	Н6
0.1 g, 9 200 Hz	73 dBA	75 dBA	H7
	80 dBA	82 dBA	H8

### **North American Standards**

In North America the system components fulfil the requirements of the table below.

Rated supply	Standards	
voltage	Converter module	Enclosed converter
to 990 V	UL 61800-5-1	UL/CSA types:
	Available for converter modules	on request
	certificate no. E196914	
	UL 508 C	
	available for field exciter units.	
	Types with UL mark:	
	<ul><li>see UL Listing www.ul.com /</li></ul>	
	certificate no. E196914	
	<ul> <li>or on request</li> </ul>	

### **Regulatory compliance**

The converter module and enclosed converter components are designed for use in industrial environments. In EEA countries, the components fulfil the requirements of the EU directives, see table below.

European union directive	Manufacturer's assurance	Harmonized standards Converter module
Machinery Directive		
2006/42/EC	Declaration of Conformity	EN61800-5-2:2017
		EN62061:2005 + Cor.:2010 + A1:2013 + A2:2015
		EN13849-1:2015
		EN60204-1:2006 + A1:2009
Low Voltage Directive		
2014/35/EU	Declaration of Conformity	EN61800-5-1:2007
EMC Directive		
2014/30/EU	Declaration of Conformity	EN61800-3:2004 + A1:2012
	(Provided that all installation instructions concerning	
	cable selection, cabling and EMC filters or dedicated	
	transformer are followed.)	
RoHS Directive		
2011/65/EU	Decleration of Conformity	

## DCS880 power converter modules

#### General

The power converter modules DCS880-S have the protection class IP00 and are to be mounted in a cubicle or finger protected area. There are different sizes (H1 - H8), graduated in terms of current and voltage ranges.

All units are equipped with the DCS880 Control Panel. It can be snapped into place on the power converter module or installed in the switchgear cubicle door by means of a mounting kit.

Accessories such as external fuses, line reactors etc. are also available, to complete the drive system.

All converter modules up to 525 V and 1000 A (H1 ... H4) are equipped with field exciters.

The power section of the converters is available as single (2-Q) bridge or double (4-Q) bridge.
4-Q drives are required for regenerative breaking.
4-Q drives can be built by:

- Double (4-Q) armature bridge or
- Single (2-Q) armature bridge plus a double (4-Q) field converter bridge

The bridge type has an influence on the maximum output voltage of the converter. See table below.


System connection voltage	DC voltage (re	ecommended)	Ideal DC voltage without load		
U <sub>vn</sub> [V]	$U_{dmax2-Q}[V]$	$U_{dmax4-Q}[V]$	U <sub>dio</sub> [V]		
230	265	240	310	04	
380	440	395	510	04	
400	465	415	540	04	
415	480	430	560	04	
440	510	455	590	05	
460	530	480	620	05	
480	555	500	640	05	
500	580	520	670	05	
525	610	545	700	05	
575	670	600	770	06	
600	700	625	810	06	
660	765	685	890	07	
690	800	720	930	07	
800	915	820	1060	08	
990	1160	1040	1350	10	
1200	1380	1235	1590	12	


#### Reference variables

The voltage characteristics are shown in the table beside. The DC voltage characteristics have been calculated using the following assumptions:

- U<sub>VN</sub> = rated input terminal voltage, 3-phase
- Voltage tolerance ±10 %
- Internal voltage drop approx. 1 %
- If a deviation or a voltage drop has to be taken into consideration in compliance with IEC and VDE standards, the output voltage or the output current must be reduced by the actual factor according to the table on the right.

If armature voltages higher than recommended are requested, please check carefully, whether your system is still working under safe conditions. The maximum output voltage of a 4-Q drive can be increased up to the level of U<sub>dmax</sub> 2-Q. Thus the torque reversal from motoring mode to generating mode increases up to 300 ms. This lowers the dynamics of the drive and is only recommended for non-dynamic applications (e.g. E-Stop function).

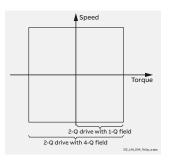

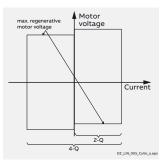

13

## Ratings, types and voltages

### Current ratings, dimensions and weights

Unit	2-Q	4-Q							Internal field	Weight	Dimensions	
size	rated Current	rated Current							current			
	DCS880-S01	DCS880-S02										
	I <sub>DC</sub> [A]	I <sub>DC</sub> [A]	500/525	600	690	800	990	1190	[A]	[lb]	h x w x d [inch]	hxwxd [mm]
H1	20	25	•						6	24.25	14.56 x 10.63 x 8.46	370 x 270 x 215
	45	50	•						12			
	65	75	•						12			
	90	100	•						12			
H2	135	150	•						18	35.27	14.56 x 10.63 x 10.67	370 x 270 x 271
	180	200	•						18			
	225	250	•						18			
	270	300	•						18			
H3	290	320		•						55.11	18.11 x 10.63 x 12.48	460 x 270 x 317
	315	350	•						25			
	405	450	•						25			
	470	520	•						25			
H4	590	650		•						83.77	25.39 x 10.63 x 13.86	645 x 270 x 352
	610	680	•						30			
	740	820	•						30			
	900	1000	•						30			
H5	1190	1190	•						25 <sup>1)</sup>	121.25	29.53 x 10.63 x 14.65	750 x 270 x 372
H6	900	900		•	•				25 <sup>1)</sup>	242.50	37.17 x 20.08 x 16.14	944 x 510 x 410
	1200	1200	•						25 1)			
	1500	1500	•	•	•				25 1)			
	2000		•	•	•				25 1)			
		2000	•						25 1)			
H7	1900	1900				•				Power unit		
	2050	2050	•	•	•					396.80	68.90 x 18.11 x 16.14	1750 x 460 x 410
	2500	2500	•	•	•	•				Control unit		
	3000	3000	•	•	•	•				15.43	14.56 x 10.63 x 8.46	370 x 270 x 215
Н8	2050	2050					•			Power unit		
	2600	2600					•	•		694.45	68.90 x 29.92 x 22.44	1750 x 760 x 570
	3300	3300	•	•	•	•	•	•		Control unit		
	4000	4000	•	•	•	•	•	•		15.43	14.56 x 10.63 x 8.46	370 x 270 x 215
	4800	4800		•	•	•						
	5200	5200	•									

<sup>&</sup>lt;sup>1)</sup> FEX-425 internal field exciter as option. Included as standard option +S164.



Distributed by Gross Automation | +1 (262) 252-1600. | ABBDrivessales@grossautomation.com

### **Current ratings**

### 2-Q converters

The current ratings for the DCS880 with 50 Hz and 60 Hz supplies are given below. The symbols are described below the table. The characteristics are based on an ambient temperature of max. 40°C and an elevation of max. 1000 m a.s.l.

Type code Non-reversing (2-Q)	Frame Size	Input AC Current	Output DC	Norma	l Duty		Heavy [	Outy		Internal Field	DSL Included <sup>2)</sup>	Fan Voltage	Air Flow	Heat Dissipation
Non-reversing (2-Q)	3126	Current	Current Cont.		110% 60sec	Power	100% 15min	150% 60sec	Power	Current	iliciadea <sup>,</sup>			Dissipation
		A <sub>rms</sub>	A <sub>DC</sub>	A <sub>ND</sub>	A <sub>ND</sub>	HP <sub>ND</sub>	A <sub>HD</sub>	<b>A</b> <sub>HD</sub>	HP <sub>HD</sub>	Α		Vac	60 Hz ft³/min	BTU/hr
500 V		rms	DC	ND	ND	ND	ни	ни	ни				-	-
DCS880-S01-0020-05X0		16	20	19	21	15	16	24	10	6		No-Fan	No-Fan	375
DCS880-S01-0045-05X0	-	37	45	44	48	25	36	54	20	12		Internal	34	580
DCS880-S01-0065-05X0	H1	53	65	64	70	40	54	81	30	12		Internal	34	751
DCS880-S01-0090-05X0	-	74	90	89	98	60	76	114	50	12		Internal	34	955
DCS880-S01-0135-05X0		111	135	133	146	75	105	157	60	18		Internal	100	1297
DCS880-S01-0180-05X0	-	148	180	178	196	100	130	195	75	18		Internal	100	1911
DCS880-S01-0225-05X0	-H2	185	225	222	244	125	170	255	100	18		Internal	100	2491
DCS880-S01-0270-05X0	-	221	270	267	294	150	200	300	125	18		Internal	100	2798
DCS880-S01-0315-05X0		258	315	312	343	200	240	360	150	25		Internal	100	3105
DCS880-S01-0405-05X0	H3	332	405	393	432	250	310	465	175	25		Internal	100	3822
DCS880-S01-0470-05X0	5	385	470	465	512	300	350	525	200	25		Internal	150	4504
DCS880-S01-0610-05X0		500	610	595	655	400	455	682	250	30		230; 1-ph	230	6005
DCS880-S01-0740-05X0	H4	607	740	733	806	500	570	855	300	30		230; 1-ph	230	7302
DCS880-S01-0900-05X0	- ' ' -	738	900	891	980	600	680	1020	400	30		230; 1-ph	250	9145
DCS880-S01-1190-05X0+S164	H5	976	1190	1104	1214	700	860	1290	500	25 <sup>1)</sup>		230; 1-ph	540	17061
DCS880-S01-1200-05X0+S164	113	984	1200	1104	1214	700	888	1332	600	25 <sup>1)</sup>	•	230; 1-ph	471	17402
DCS880-S01-1500-05X0+S164	Н6	1230	1500	1485	1634	1000	1200	1800	800	25 <sup>1)</sup>	•	230; 1-ph	471	18084
DCS880-S01-2000-05X0+S164	_110	1640	2000	1887	2076	1100	1479	2219	900	25 <sup>1)</sup>	•	230; 1-ph	471	22520
DCS880-S01-2050-05X0		1681	2050	1918	2110	1250	1550	2325	1000	-	•	400; 3-ph; 50Hz		27297
DCS880-S01-2500-05X0	H7	2050	2500	2411	2652	1500	1980	2970	1250	_	•	525; 3-ph; 50Hz		30709
DCS880-S01-3000-05X0	- ' ' '	2460	3000	2971	3268	1750	2350	3525	1500	-	•	460; 3-ph; 60Hz		37875
DCS880-S01-3300-05L0/R0		2706	3300	3091	3400	2000	2416	3624	1500	_	•	400, 3-pii, 00112	2472	39922
DCS880-S01-4000-05L0/R0	H8	3280	4000	3702	4072	2500	2977	4466	2000	-	•	400; 3-ph; 50Hz	2472	44358
DCS880-S01-5200-05L0/R0	_110	4264	5200	4833	5316	3250	3800	5700	2500	-	•	460; 3-ph; 60Hz	2472	64831
600 V		7207	3200	4033	3310	3230	3000	3100	2300					04031
DCS880-S01-0290-06X0	H3	238	290	287	316	200	240	360	200	-	•	Internal	100	3105
DCS880-S01-0590-06X0	H4	484	590	587	646	500	470	705	300	_		230; 1-ph	230	6347
DCS880-S01-0900-06X0+S164		738	900	829	912	600	684	1026	500	251)	•	230; 1-ph	471	17402
DCS880-S01-1500-06X0+S164	_ 110	1230	1500	1485	1634	1100	1200	1800	900	25 <sup>1)</sup>		230; 1-ph	471	21496
DCS880-S01-2000-06X0+S164	-	1640	2000	1944	2138	1500	1479	2219	1100	251)	•	230; 1-ph	471	27638
DCS880-S01-2050-06X0	H7	1681	2050	1902	2092	1500	1520	2280	1250	-	•	400; 3-ph; 50Hz	883	31392
		2050	2500	2476	2724	1750	1940	2910	1500	-	•			34804
DCS880-S01-2500-06X0	-	2460		2971	3268	2250	2416	3624	1750	-	•	525; 3-ph; 50Hz	883	
DCS880-S01-3000-06X0 DCS880-S01-3300-06L0/R0	Н8	2706	3000	3047	3352	2250	2530	3795	2000	-	•	460; 3-ph; 60Hz		41628 44699
•	по		4000	3781	4159	2500	3036	4554	2250	-	•	400; 3-ph; 50Hz	2472 2472	
DCS880-S01-4000-06L0/R0	-	3280 3936	4800	4449	4894	3500	3734		3000	-	•	460; 3-ph; 60Hz	2472	51523 66537
DCS880-S01-4800-06L0/R0 690 V		3930	4600	4449	4094	3300	3134	5601	3000	-	•		2412	00331
	LIC	720	000	020	012	700	C04	1026	C00	251)		220 1	471	17402
DCS880-S01-0900-07X0+S164	110	738	900	829	912	700	684	1026	600		•	230; 1-ph	471	17402
DCS880-S01-1500-07X0+S164	-	1230	1500	1465	1612	1250	1200	1800	1000 1250	25 <sup>1)</sup>		230; 1-ph	471	21496
DCS880-S01-2000-07X0+S164	LI7	1640	2000	1944	2138	1750	1479	2219		- 25"	•	230; 1-ph	471	27638
DCS880-S01-2050-07X0	H7	1681	2050	1902		1750	1520 1940	2280	1250	-	•	400; 3-ph; 50Hz		31392
DCS880-S01-2500-07X0	_	2050	2500	2476	2724	2250		2910	1750		-	525; 3-ph; 50Hz	883	34804
DCS880-S01-3000-07X0	110	2460	3000	2971	3268	2500	2530	3795	2000	-	•	460; 3-ph; 60Hz		41628
DCS880-S01-3300-07L0/R0	_H8	2706	3300	3047	3352	2750	2416	3624	2000	-	•	400; 3-ph; 50Hz	2472	44699
DCS880-S01-4000-07L0/R0	-	3280	4000	3781	4159	3500	3036	4554	2500	-	•	460; 3-ph; 60Hz	2472	51523
DCS880-S01-4800-07L0/R0		3936	4800	4449	4894	4000	3734	5601	3500	-	•		2472	66537

### Note

- Plus Code +S164 is to specify an FEX-425 internal field exciter as option; three-phase or single phase, Greater than 500 Vac use auto transformer, Greater than 600 Vac Use isol. Transformer
- 2) SDCS-DSL-Hxx board included as standard

The ratings apply at an ambiant temperature of 40 °C (104 °F)

 $\ensuremath{\text{2-Quadrant}}$  drives CANNOT decelerate a load or power motors in the reverse direction

The DCS880 Drive requires a line reactor or isolation transformer

### Definitions

Normal Duty: 110% overload for 60 seconds; then <= 100% for 10 minutes Heavy Duty: 150% overload for 60 seconds; then <= 100% for 15 minutes

### Available Upon Request;

360 - 800 Vac line voltage DATA AVAILABLE UPON REQUEST 450 - 990 Vac line voltage DATA AVAILABLE UPON REQUEST 540 - 1200 Vac line voltage DATA AVAILABLE UPON REQUEST

Distributed by Gross Automation | +1 (262) 252-1600. | ABBDrivessales@grossautomation.com

### **Current ratings**

### 4-Q converters

The current ratings for the DCS880 with 50 Hz and 60 Hz supplies are given below. The symbols are described below the table. The characteristics are based on an ambient temperature of max. 40°C and an elevation of max. 1000 m a.s.l.

Type code		Input AC	Output	Norma	l Duty		Heavy [	Outy		Internal	DSL	Fan Voltage	Air Flow	
Reversing (4-Q)	Size	Current	DC Current Cont.	100% 10min	110% 60sec	Power	100% 15min	150% 60sec	Power	Field Current	Included <sup>2)</sup>			Dissipation
		A <sub>rms</sub>	A <sub>DC</sub>	A <sub>ND</sub>	A <sub>ND</sub>	HP <sub>ND</sub>	A <sub>HD</sub>	<b>A</b> <sub>HD</sub>	HP <sub>HD</sub>	A		Vac	60 Hz ft³/min	BTU/hr
500 V		11113		ND .	ND	ND	110	110	110					
DCS880-S02-0025-05X0		21	25	24	26	15	22	33	10	6		No-Fan	No-Fan	375
DCS880-S02-0050-05X0	-	41	50	49	54	30	38	57	25	12		Internal	34	580
DCS880-S02-0075-05X0	-H1	62	75	74	81	40	60	90	30	12		Internal	34	751
DCS880-S02-0100-05X0	_	82	100	97	107	60	85	127	50	12		Internal	34	955
DCS880-S02-0150-05X0		123	150	147	162	75	114	171	60	18		Internal	100	1297
DCS880-S02-0200-05X0		164	200	196	216	125	145	217	75	18		Internal	100	1911
DCS880-S02-0250-05X0	-H2	205	250	244	268	150	185	277	100	18		Internal	100	2491
DCS880-S02-0300-05X0	_	246	300	292	321	175	225	337	125	18		Internal	100	2798
DCS880-S02-0350-05X0		287	350	340	374	200	275	412	150	25		Internal	100	3105
DCS880-S02-0450-05X0	H3	369	450	429	472	250	350	525	200	25		Internal	100	3822
DCS880-S02-0520-05X0		426	520	490	539	300	400	600	250	25		Internal	150	4504
DCS880-S02-0680-05X0		558	680	673	740	400	525	787	300	30		230; 1-ph	230	6005
DCS880-S02-0820-05X0	H4	672	820	812	893	500	630	945	400	30		230; 1-ph	230	7302
DCS880-S02-1000-05X0	-	820	1000	990	1089	600	750	1125	450	30		230; 1-ph	250	9145
DCS880-S02-1190-05X0+S164	H5	976	1190	1165	1089	700	860	1290	500	251)	•	230; 1-ph	540	17061
DCS880-S02-1200-05X0+S164		984	1200	1174	1291	700	888	1332	500	251)		230; 1-ph	471	17402
DCS880-S02-1500-05X0+S164	Н6	1230	1500	1428	1571	900	1200	1800	800	25 <sup>1)</sup>		230; 1-ph	471	18084
DCS880-S02-2000-05X0+S164		1640	2000	1887	2076	1100	1479	2219	900	25 <sup>1)</sup>	•	230; 1-ph	471	22520
DCS880-S02-2050-05X0		1681	2050	1918	2110	1250	1550	2325	1000	-	•	400; 3-ph; 50Hz		27297
DCS880-S02-2500-05X0	H7	2050	2500	2439	2683	1500	2000	3000	1250			525; 3-ph; 50Hz	883	30709
DCS880-S02-3000-05X0		2460	3000	2835	3119	1750	2330	3495	1500			460; 3-ph; 60Hz		37875
DCS880-S02-3300-05L0/R0		2706	3300	3091	3400	2000	2416	3624	1500	_			2472	39922
DCS880-S02-4000-05L0/R0	H8	3280	4000	3702	4072	2250	2977	4466	1750			-400; 3-ph; 50Hz	2472	44358
DCS880-S02-5200-05L0/R0	-110	4264	5200	4833	5316	3000	3800	5700	2500		•	- 460; 3-ph; 60Hz	2472	64831
600 V	-	7207	3200	4033	3310	3000	3000	3100	2300					04031
DCS880-S02-0320-06X0	H3	262	320	307	338	250	256	384	200	-	•	Internal	100	3105
DCS880-S02-0650-06X0	H4	533	650	643	707	500	514	771	400	_	•	230; 1-ph	230	6347
DCS880-S02-0900-06X0+S164		738	900	829	912	600	684	1026	500	25 <sup>1)</sup>		230; 1-ph	471	17402
DCS880-S02-1500-06X0+S164	- H6	1230	1500	1428	1571	1100	1200	1800	900	251)	•	250, 1 pii	471	21496
DCS880-S02-2050-06X0		1681	2050	1902	2092	1500	1520	2280	1100	-		400; 3-ph; 50Hz	883	31392
DCS880-S02-2500-06X0	H7	2050	2500	2422	2664	1750	1940	2910	1500	-	•	525; 3-ph; 50Hz	883	34804
DCS880-S02-2500-06X0	-п,	2460	3000	2810	3091	2000	2270	3405	1750		•	460; 3-ph; 60Hz		41628
DCS880-S02-3000-06X0		2706	3300	3047	3352	2250	2416	3624	2000	-	•	+00; 3-pii; 60HZ	2472	44699
DCS880-S02-3300-06L0/R0	H8	3280	4000	3781	4159	2500	3036	4554	2250	-	•	400; 3-ph; 50Hz	2472	51523
	_ 118				4894							460; 3-ph; 60Hz	2472	
DCS880-S02-4800-06L0/R0		3936	4800	4449	4094	3000	3734	5601	2500		•		2412	66537
690 V		720	000	020	012	700	604	1026	600	251)		220 1 1-	471	17400
DCS880-S02-0900-07X0+S164		738	900	829	912	700	684	1026	600	251)	•	230; 1-ph	471	17402
DCS880-S02-1500-07X0+S164		1230	1500	1465	1612	1250	1200	1800	1100	251)	•	400 2 ml 5011	471	21496
DCS880-S02-2050-07X0		1681	2050	1902	2092	1750	1520	2280	1400	-	•	· · · ·	883	31392
DCS880-S02-2500-07X0	H7	2050	2500	2422	2664	2250	1940	2910	1750		•	525; 3-ph; 50Hz	883	34804
DCS880-S02-3000-07X0		2460	3000	2810	3091	2500	2270	3405	2000		•	460; 3-ph; 60Hz		41628
DCS880-S02-3300-07L0/R0	-	2706	3300	3047	3352	2800	2416	3624	2250	-	•	400; 3-ph; 50Hz	2472	44699
DCS880-S02-4000-07L0/R0	H8	3280	4000	3781	4159	3500	3036	4554	2800		•	460; 3-ph; 60Hz	2472	51523
DCS880-S02-4800-07L0/R0		3936	4800	4449	4894	4000	3734	5601	3500		•	, , , , , , , , , ,	2472	66537

### Note

- 1) Plus Code +S164 is to specify an FEX-425 internal field exciter as option; three-phase or single phase, Greater than 500 Vac use auto transformer, Greater than 600 Vac Use isol. Transformer
- 2) SDCS-DSL-Hxx board included as standard

The ratings apply at an ambiant temperature of 40  $^{\circ}\text{C}$  (104  $^{\circ}\text{F})$ 

 $\mbox{4-Quadrant}$  drives CAN decelerate a load or power motors in the forward or reverse direction

The DCS880 Drive requires a line reactor or isolation transformer

### Definition

Normal Duty: 110% overload for 60 seconds; then <= 100% for 10 minutes Heavy Duty: 150% overload for 60 seconds; then <= 100% for 15 minutes


### Available Upon Request;

360 - 800 Vac line voltage DATA AVAILABLE UPON REQUEST


450 -  $990\,Vac$  line voltage DATA AVAILABLE UPON REQUEST

540 - 1200 Vac line voltage DATA AVAILABLE UPON REQUEST


# Components overview of converter size H1 ... H4

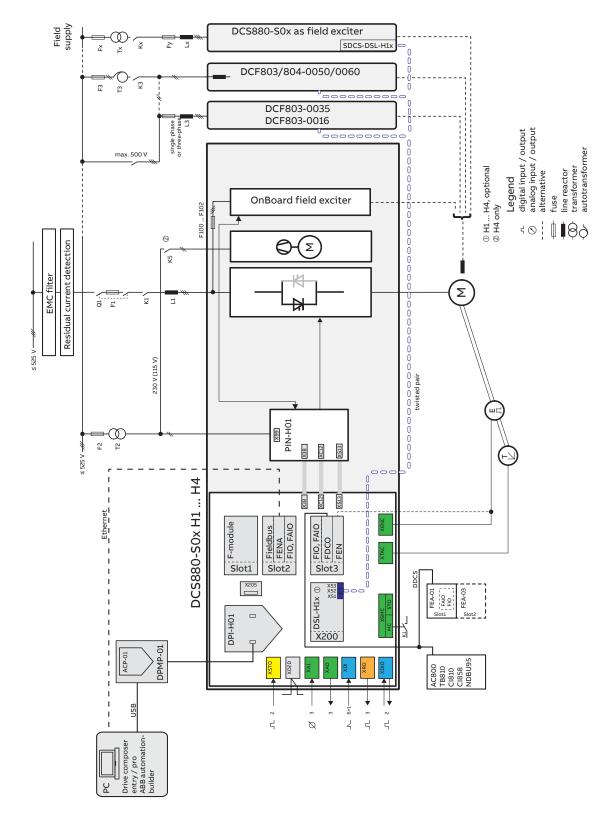


# Components overview of converter size H5

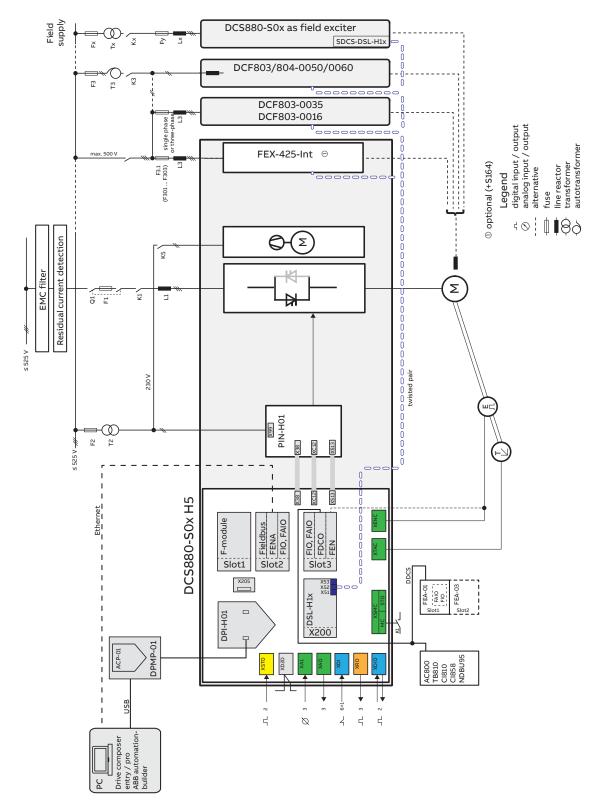

# Components overview of converter size H6

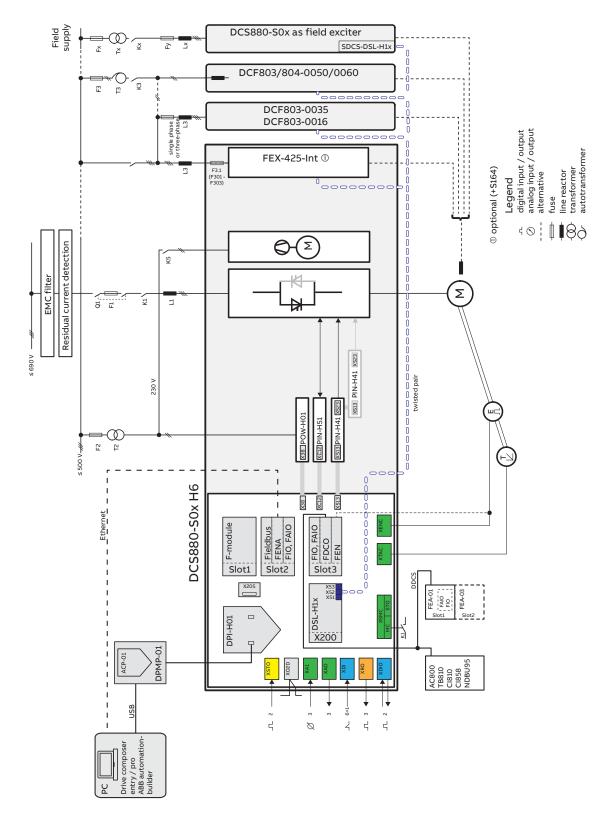


# Components overview of converter size H7 ... H8 with external control unit

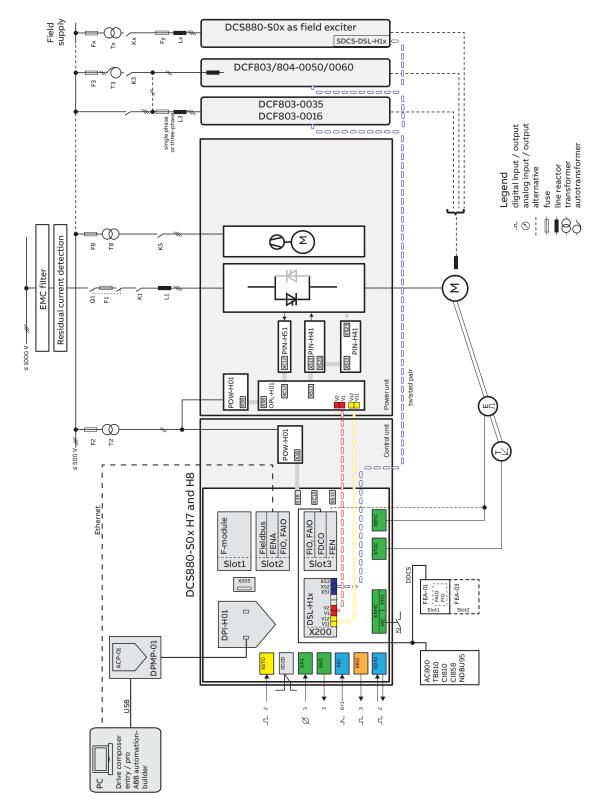

# Standard interface and extensions for comprehensive connectivity

Example of a typical single drives input/output connection diagram.


### **DCS880**

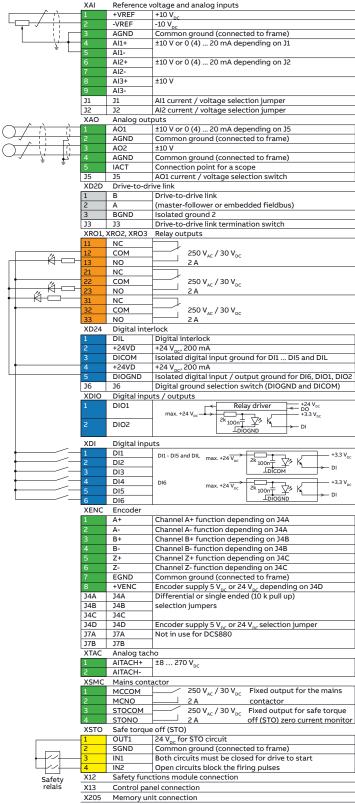

01 Control unit SDCS-CON-H01 The DCS880 single drives offers a wide range of standard interfaces. In addition the drive has three option slots that can be used for extensions

including fieldbus adapter modules, input/output extension modules, feedback modules and a safety functions module.

Standard interface	Description
3 analog inputs (XAI)	Current input: –20 20 mA, Voltage input: –10 10 V, Resolution: 11 bit + sign bit
2 analog outputs (XAO)	0 to 20 mA, 0 10 V
6 digital inputs (XDI)	Input type: Source / Sink (DI1 DI5), Source (DI6) DI6 (XDI:6) can alternatively be used as an input for a PTC thermistor.
Digital input interlock (DIIL)	Input type: Source / Sink
2 digital inputs/outputs (XDIO)	As input: 24 V logic level As output: Total output current from 24 V <sub>DC</sub> is limited to 200 mA Can be set as pulse train input and output
3 relay outputs (XRO1, XRO2, XRO3)	250 V <sub>AC</sub> / 30 V <sub>DC</sub> , 2 A
Safe torque off (XSTO)	For the drive to start, both connections must be closed
Main contactor (XSMC)	Main contactor control, fault shut-down circuit
Drive-to-drive link (XD2D)	Physical layer: EIA-485
Built-in Modbus	Physical layer: EIA-485
Assistant control panel/	Connector: RJ-45
PC tool connection	USB via control panel
Encoder	5 V / 24 V, Differential or single ended
Tacho	±8 270 V <sub>pc</sub>

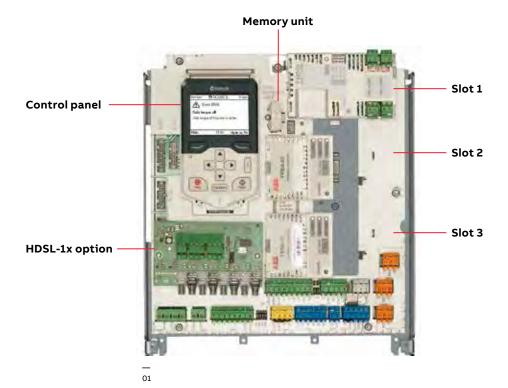

# Interface option modules

Input/output extension modules for increased connectivity

Standard input and output can be extended by using optional analog and digital input/output extension modules. The modules are easily installed in the extension slots located on the control unit.

## Analog and digital input/output extension modules

Option	Option code	Connections
FIO-01	+L501	4×DIO (24 V), 2×RO
FIO-11	+L500	3×AI (mA/V), 1×AO (mA), 2×DIO
FAIO-01	+L525	2×AI(mA/V), 2×AO(mA)
FDIO-01	+L526	3xDI (24 V, 115 V, 230 V), 2xRO

Speed feedback interfaces for precise process control

DCS880 drives can be connected to various feed-back devices, such as HTL pulse encoder, TTL pulse encoder, absolute encoder and resolver. The optional feedback module is installed in the option slot on the drive. It is possible to use two feedback modules at the same time, either of the same type or different type.

### Feedback interface modules

Connections	Option code	Option
2 inputs (TTL pulse encoder), 1 output	+L517	FEN-01
2 inputs (SinCos absolute TTL pulse encoder), 1 output	+L518	FEN-11
2 inputs (Resolver, TTL pulse encoder), 1 output	+L516	FEN-21
1 input (HTL pulse encoder). 1 output	+L502	FEN-31

### I/O option extension adapter

For additional I/O option slots the FEA-03 is suitable for this use. An analog and digital input/output extension and speed feedback interface can be installed on the FEA-03. Two extension modules can be installed on each I/O extension slot. The connection to the control unit is via an fiber optic link. The adapter can be mounted on an DIN rail (35 x 7.5 mm). Extension adapter requires FDCO option module

### I/O extension adapter

Option	Description	Ordering code
FEA-03	2 x F-type option	3ADT200067R0001
	extension slots	

# **Communication option modules**

### DDCS communication option modules

The FDCO-OX optical DDCS communication options are add-on modules on the DCS880 industrial drives control unit. The modules include connectors for two fiber optic DDCS channels. The FDCO-OX modules make it possible to perform master-follower and AC800 M communication.

### **DDCS** communication option modules

Option	Option code	Connections
FDCO-01	+L503	Optical DDCS (10 Mbd/10 Mbd)
FDCO-02	+L508	Optical DDCS (10 Mbd/5 Mbd)

### DCSLink communication option modules

The SDCS-DSL-Hxx DCSLink communication options are add-on modules on the DCS880 industrial drives control unit. The option include connectors for DCSLink communication as well as up to 4 fiber optics channels for optical power link communication. DCSLink is used to control external field exciters and also used for 12- and higher pulse operation as well as Master-follower applications. The optical power link communications enable remote control of a power unit as well as parallel operation of up to four power units.

### DCSLink communication option modules

Option	Option code	Connections
SDCS-DSL-H10	+S521	1 DCSLink channel,
		0 channels optical power link
SDCS-DSL-H12	+ <b>S</b> 522	1 DCSLink channel,
		2 channels optical power link
SDCS-DSL-H14	+ <b>S</b> 523	1 DCSLink channel,
		4 channels optical power link



# Flexible connectivity to automation networks



01 F-type fieldbus adapters

02 NETA-21

Our fieldbus adapter modules enable communication between drives, systems, devices and software. Our industrial drives are compatible with a wide range of fieldbus protocols.

The plug-in fieldbus adapter module can easily be mounted inside the drive. Other benefits include reduced wiring costs when compared with traditional input/output connections. Fieldbus systems are also less complex than conventional systems, resulting in less overall maintenance.

### Multiple fieldbus connections for flexible control

DCS880 supports two fieldbus connections simultaneously. The user has flexibility of choice for control modes by being able to select one protocol for control and one for monitoring. Also redundant fieldbus connection is possible.

### **Drive monitoring**

A set of drive parameters and/or actual signals, such as torque, speed, current, etc., can be selected for cyclic data transfer, providing fast data access.

### **Drive diagnostics**

Accurate and reliable diagnostic information can be obtained through the alarm, limit and fault words.

### **Drive parameter handling**

The Ethernet fieldbus adapter module allows users to build an Ethernet network for drive monitoring and diagnostic and parameter handling purposes.

### Remote monitoring access worldwide

The remote monitoring tool, NETA-21, gives easy access to the drive via the Internet or local Ethernet network. NETA-21 comes with a built-in web server. Through the interface the user can configure drive parameters, monitor drive log data and follow up load levels, run time and I/O data.

The user can access the remote monitoring tool web page using 3G modem from anywhere with a standard PC, tablet or a mobile phone. The remote monitoring tool allows personnel to monitor or perform maintenance for unmanned or manned applications and enables access for multiple users from several locations.

### **Enhanced monitoring functions**

Values of process variables or drives actual values can be logged to NETA-21's SD memory card or sent forward to a centralized database.

### Cabling

Substituting the large amount of conventional drive control cabling and wiring with a single cable reduces costs and increases system reliability and flexibility.

### Design

The use of fieldbus control reduces engineering time at installation due to the modular structure of the hardware and firmware and the simplicity of the connections to the drives.

### Commissioning and assembly

The modular machine configuration allows precommissioning of single machine sections and provides easy and fast assembly of the complete installation.

## Universal communication with ABB fieldbus adapters

The DCS880 supports the following fieldbus protocols:

### Fieldbus adapter modules

Fieldbus pro	Option code	Option
PROFIBUS DP, DPV0/	+K454	FPBA-01
CANo	+K457	FCAN-01
Devicel	+K451	FDNA-01
1 port EtherNet/IP™, Modbus PROFIN	+K473	FENA-11
2 port EtherNet/IP™, Modbus PROFINET IO, PROFIS	+K475	FENA-21
Ether	+K469	FECA-01
Modbus	+K458	FSCA-01
Powe	+K470	FEPL-02
Control	+K462	FCNA-01

<sup>1)</sup> For the PROFIsafe to work the PROFINET fieldbus adapter module (FENA-21) and the safety functions module are required.

# Integrated safety simplifies configuration

03 FSO-21, FSE-31

Integrated safety reduces the need for external safety components, simplifying configuration and reducing installation space. The safety functionality is a built-in feature of the DCS880, with safe torque off (STO) as standard. Additional safety functions can be commissioned with the optional and compact safety functions module. The drives' functional safety is designed in accordance with EN/IEC 61800-5-2 and complies with the requirements of the European Union Machinery Directive 2006/42/EC.

#### Safe torque off as standard

Safe torque off (STO) is used to prevent unexpected startup and in stopping-related functions, enabling safe machine maintenance and operation. With safe torque off activated, the drive will not provide a rotational field. This prevents the motor from generating torque on the shaft. This function corresponds to an uncontrolled stop in accordance with stop category 0 of EN 60204-1.

### The safety functions module

The easy to connect and configure safety functions module (FSO) offers a wide range of safety functions and a self diagnostic function that meets current safety requirements and standards, all in one compact module. Compared to using external safety components, the safety functions module comes with the supported functions seamlessly integrated with the drive functionality, reducing the implementation of safety function connections and configuration. Installation of the module results in less need for cabling and provides a cost-effective solution.

Commissioning and configuration of the safety functions module is done with the Drive composer pro PC tool. Larger safety systems can be built using PROFIsafe over Profinet connection between a safety PLC (such as AC500-S) and the DCS880 drive. The connection is achieved using the FENA-21 fieldbus adapter module plus the safety functions module FSO-21+FSE-31.

The safety functions module can also be ordered as a spare part kit and installed afterwards to the drive. The kit includes most common assembly accessories for DCS880 drives.

The module supports the following safety functions (which achieve up to SIL3 or PLe (Cat. 3) safety level:

- Safe stop 1 (SS1) brings the machine to a stop (STO) using a monitored deceleration ramp. It is typically used in applications where the machinery motion needs to be brought to a stop (stop category 1) in a controlled way before switching over to the no-torque state.
- Safe stop emergency (SSE) can be configured to, upon request, either activate STO instantly (category 0 stop), or first initiate motor deceleration and then, once the motor has stopped, activate the STO (category 1 stop).
- Safe brake control (SBC) provides a safe output for controlling the motor's external (mechanical) brakes, together with STO.
- Safely-limited speed (SLS) ensures that the specified speed limit of the motor is not exceeded.
   This allows machine interaction to be performed at slow speed without stopping the drive. The safety function module comes with four individual SLS settings for speed monitoring.
- Safe maximum speed (SMS) monitors that the speed of the motor does not exceed the configured speed limit.
- Prevention of unexpected startup (POUS)
   ensures that the machine remains stopped
   when people are in a danger area.
- Safe direction (SDI) ensures that rotation is allowed only to the selected direction.
- Safe speed monitor (SSM) provides information that speed is within the configured limits.



### Safety functions module

Option	Ordering code
FSO-21+FSE-31	+Q972+L521 <sup>1)</sup>

 $<sup>^{\</sup>mbox{\tiny 1)}}$  For availability please check with your local ABB

# Common features throughout the whole DCS880 product family



## **Standard DCS880 features**

### DCS880 basic firmware

DCS880 firmware includes the basic function of speed control, armature current, field current and motor voltage. The flexible design for command location enables field bus control or masterfollower control or control from hardware signals as well as a mixed structure. The design of drive logic enables a drive reaction defined by Profibus standard but can also configured to adapt classic command structures.

### Integrated safe torque off (STO)

- Safe torque off for implementing safe machinery
- SIL 3, PL e

### **Extensive I/O connections**

- The DCS880 features extensive I/O connections for flexible configuration in various applications
- · Colored terminals for easy configuration

### Assistant control panel and primary settings

- The ACS-AP-I assistant control panel speaks 16 different languages
- · USB interface for PC and tool connection
- · Help button for problem-solving

### **Commissioning Assistants**

DCS880 includes a eight step assistant to set up the drive. The assistant is available via control panel and Drive Composer Pro PC-tool.

Following comissioning steps are covered:

- · Name plate data
- Standard I/O
- Field current controller with auto tuning
- · Armature current controller with auto tuning
- First motor turning
- Speed feedback selection with autodetect of speed feedback device
- · Speed controller with auto tuning
- · Field weakening with auto tuning



# Shared features of the ABB all-compatible drives portfolio

### Adaptive programming

- DCS880 firmware includes an easy-to-use and visual adaptive programming feature.
- Adaptive programming can be used to add logical functions and conditions for process fine-tuning.

### Same PC tools for ABB all-compatible drives

- Free Drive Composer entry available at www.abb.com.
- Same parameter structure makes the all-compatible platform easy to use.


### Removable memory unit

The removable memory unit stores the firmware that includes user settings, parameter settings and motor data. Situated on the control unit, the memory unit can easily be removed for maintenance, update or replacement purposes.

### Connectivity

- The DCS880 supports F-series fieldbus adapters used in the ABB all-compatible platform.
- Mobile phone connectivity via the optional Bluetooth assistant control panel.

# Standard DCS880 drives software with versatile features

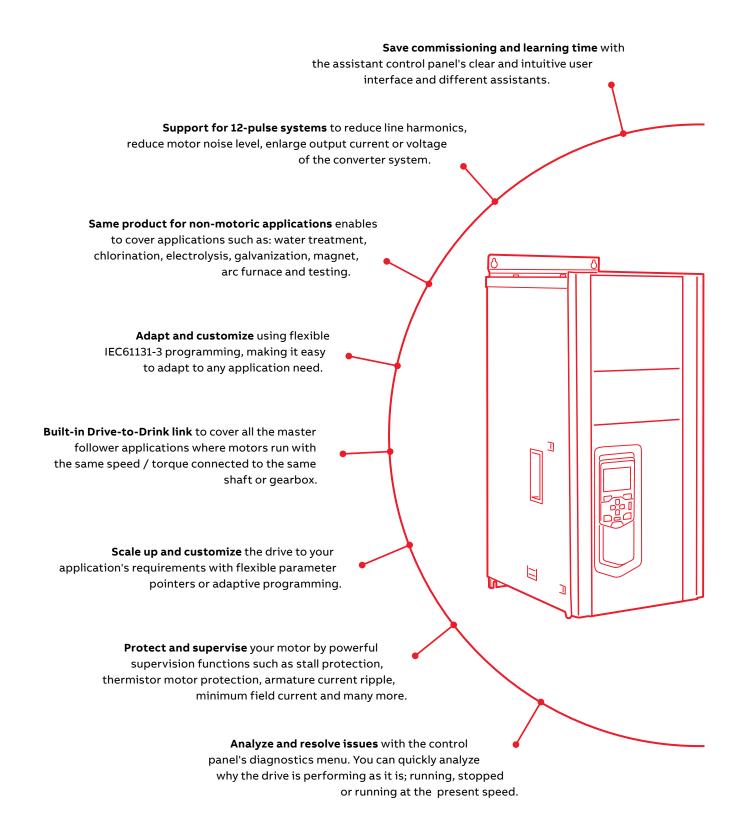


## The all-compatible DCS880 series

# The first choice for any application

### Replacement of existing DC Drives

In many installations DC drives are in reliable operation since decades. While the DC motors can often be operated for many more years, the DC drive however might experience lack of support and spare parts and maybe even reliability. A replacement of the old DC drive with a DCS880 can extend the lifetime of the equipment by some more decades at very low costs. Additionally it can easily get upgraded to the newest safety requirements by using STO without the need of adding or replacing breakers or contactors. Since existing drive installations from the past decades may comprise many different configurations, the DCS880 is prepared for any challenges with its unique flexibility and programmability.

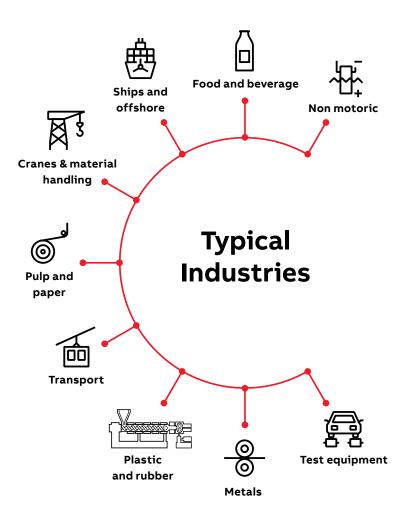

### Ships and offshore

On ships and offshore outstanding robustness and reliability is a must when driving winches, drills, mud pumps or propulsions. On top, the DCS880 offers various marine certifications.

### **Test equipment**

For testing powertrains, materials or any rotating equipment customers can rely on the DCS880's high accuracy speed and torque control, its high dynamic control and the wide field weakening range.

#### Plastic and rubber

When used in extruders, mixers, kneaders, or calendars the DCS880 convinces with high starting torque and overloadability as well as various protecting functions to protect motor and equipment.

### Metals

Rolling or tube mills often combine very high motor power with extremely fast load changes. Consequently, the DCS880 offers both – a proven high dynamic torque control and flexible high power configurations up to 20,000 A /1,500  $\rm V_{DC}$  in 6-pulse, 12-pulse or 24-pulse with high overloadability. Other applications in metals fabrication like roller tables, wire drawing or processing lines benefit from safe operation with STO and the DCS880's robustness in harsh environment.

### Pulp and paper

With the DCS880 replacements of old DC drives in an existing paper machine can be executed in very short downtimes as low as eight hours. And thanks to the integrated STO the machine can be upgraded to the newest safety requirements without installing or replacing additional contactors or breakers.

### Food and beverage

Sugar centrifuges or meat processing equipment benefit from the compact size - even with regenerative braking - and low losses combined with high realibilty.

## **Drive programming**

### Application programming based on IEC 61131-3

Automation Builder makes it possible for system integrators and machine builders to integrate their desired functionality and know-how directly into DCS880 drives. This is possible as DCS880 drives come with programming capability embedded inside the drive. Designing an application program in the drive makes the end user application run more efficiently, even without a separate programmable controller. It also brings higher end-product quality and requires less need for installation space and wiring.


Automation Builder lets you extend the standard functionality of parameter functions for DCS880 drives. This makes the DCS880 drives very flexible to meet exact requirements set for end user applications. The library management functionality in Automation Builder shortens engineering time as reuse of existing program code is possible. Additional features include the ability to select and use one of five different programming languages, effective program debugging and user password

The drive application programming license should be ordered together with the drive.

### Drive application programmability

Option	Option code
License key	+S551


For more and advanced functions the Automation Builder tools must be ordered separately. For further information please contact your

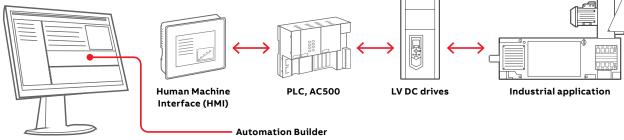

- · One engineering tool to control all industry devices
- System configuration and diagnostic
- · IEC 61131-3 programming
- · Common project data handling

### Adaptive programming

Adaptive programming is used to customize the operation of a drive in case the drive parameter setting is not sufficient. The adaptive program is built with standard function blocks included in the drive firmware elements.

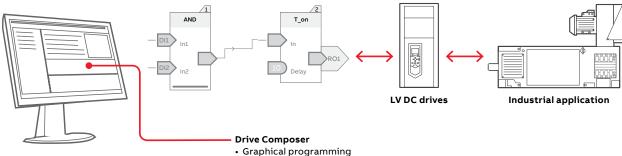

- · Predefined blocks

## Intuitive human-machine interface



The assistant control panel features intuitive use and easy navigation. High resolution display enables visual guidance. The panel saves on commissioning and learning time by means of different assistants, making the drive simple to set up

It is possible to organize parameters in different ways and store essential parameters for different configurations for any specialized application needed. The menus and messages can be customized for specific terminology so that each application can be set up and configured to its optimum performance. This makes the drive easier to use with information that is familiar to users. With the panel's text editor, users can also add information, customize text and label the drive. Powerful backup and restore functions are supported as well as different language versions. The help key provides context sensitive guidance. Faults or warnings can be resolved quickly since the help key provides troubleshooting instructions.

One control panel can be connected to several drives via DPI-H01 simultaneously using the panel network feature. The user can also select the drive to operate in the panel network. The PC tool can be easily connected to the drive through the USB connector on the control panel. There are also control panel mounting platforms, DPMP-01 and DPMP-02, available for cabinet door mounting with IP55 or IP65 protection class.

### **Assistant control panel**

Option	Option code	Description
ACS-AP-I	standard	built-in
no ACS-AP-I	0J404	no panel
ACS-AP-W	+J429	Bluetooth panel
DPI-H01	+J428	daisy-chain option

Option	Description	Ordering code
DPMP-01	Panel flush mounting kit	3AUA0000108878
DPMP-02	+Panel surface mounting kit	3AXD50000009374



Distributed by Gross Automation | +1 (262) 252-1600. | ABBDrivessales@grossautomation.com

# PC tool for easy startup and maintenance

The Drive composer PC tool offers fast and harmonized setup, commissioning and monitoring for the whole drives portfolio. The free version of the tool provides startup and maintenance capabilities, while the professional version provides additional features such as custom parameter windows, control diagrams of the drive's configuration and safety settings.


The Drive composer tool is connected to the drive using an Ethernet connection or through the USB connection on the assistant control panel. All drive information such as parameter loggers, faults, backups and event lists are gathered into a support diagnostics file with a single mouse click. This provides faster fault tracking, shortens downtime and minimizes operational and maintenance costs.

### Drive composer pro

Drive composer pro provides basic functionality, including parameter settings, downloading and uploading files and search parameters. Advanced features such as graphical control diagrams and various displays are also available. The control diagrams save users from browsing long lists of parameters and help to set the drive's logic quickly and easily. The tool has fast monitoring capabilities of multiple signals from several drives in a PC tool network. Full backup and restore functions are also included. Safety settings and adaptive programming programs can be configured with Drive composer pro.



Item	Description	Ordering code
Drive composer entry	free of charge	www.abb.com
Drive composer pro tool	single licence	3AUA0000108087
Drive composer pro tool	10 user licence	3AUA0000145150
Drive composer pro tool	20 user licence	3AUA0000145151
USB cable	5 m USB A – USB Mini B	3ADT693714P0001

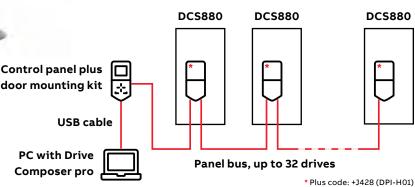

## **External field supply**


01 DCF803-0035

#### General data

- Currents from 0.3 to 520 A
- · Minimum field current monitor
- Integrated external field power converter or completely separate switchgear cubicle
- · single-phase or 3-phase model
- · Controlled by serial communication via DCSLink

All field converters are controlled by the armature converter via a serial interface (SDCS-DSL-Hxx board). This interface serves to parameterize, control and diagnose the field converter and thus provides exact control.

We recommend integrating an autotransformer in the field power converter's supply circuit to adjust the AC input voltage to the field voltage and for reducing the voltage ripple in the field circuit for single-phase operation.



### Field reversal

Field reversal is basic firmware function of DCS880. Required hardware configuration is a 2-Q (single) armature bridge plus a 4-Q (double bridge) field exciter.

Field reversal offers low dynamic torque reversal which can be used for e.g. propulsion Drive to change speed direction or E-Stop function for unidirectional mills.

## Field converter types DCF803-0035 and DCF803-0016

- Half-controlled thyristor/diode bridge (1-Q)
- · Three-phase or single-phase operation
- Microprocessor control, with the electronic system being supplied by the armature circuit converter (24 V).
- Construction and components have been designed for an insulation voltage of 600 V<sub>AC</sub>.
- Fast-response excitation is possible with an appropriate voltage reserve; de-excitation takes place by field time constant.
- Field Output voltage U, (single-phase operation):

$$U_A \le U_V * \left(\frac{100\% + TOL}{100\%}\right) * 0.9$$

TOL = tolerance of line voltage in %  $U_v$  = Line voltage,  $U_A$  = Field voltage

- Recommendation (single-phase operation):  $U_A = 0.6$  to  $0.8 * U_V$  or  $U_V = 1.25$  to  $1.7 * U_A$
- Field Output voltage  $U_A$  (three-phase operation):

$$U_A \le U_V * \left(\frac{100\% + TOL}{100\%}\right) * 1.35$$

TOL = tolerance of line voltage in %
U<sub>v</sub> = Line voltage, U<sub>A</sub> = Field voltage

Note: Calculation valid also for FEX-425 internal






Table of field converter units

Remark	auxiliary supply voltage	AC field supply voltage	Output current I <sub>cc</sub>	Unit type
external fuso L3 line choke for 3-phase operation use		110 V -15 % 500 V / 1-ph +10 % single-phase or three-phase	0.3 16 A	DCF803-0016
KLR21CTB ≤ 16 / KLR45CTB > 16 / for 1-phase operation use ND30 ≤ 16 / KLR45CTB > 16 /	24 V <sub>DC</sub> 200 mA	110 V -15 % 500 V / 1-ph +10 % single-phase or three-phase	0.3 35 A	DCF803-0035
if necessary via matching autotransformer; fuse		110 V -15 % 500 V / 1-ph +10 %	0.3 50 A	DCF803-0050
external; Dimensions HxWxD: 370x125x342 [mm	115 220 //	110 V -15 % 500 V / 1-ph +10 %	0.3 50 A	DCF804-0050
	115 or 230 V	110 V -15 % 500 V / 1-ph +10 %	0.3 60 A	DCF803-0060
		110 V -15 % 500 V / 1-ph +10 %	0.3 60 A	DCF804-0060
additional hardware components (DCF 506	-	200 V 500 V / 3-ph		DCS880-S0x-xxxx-05

02 DCF804-0050

03 DCS880-S0

04 DCF506-140-51

### Single-phase field supply

### DCF803-0050 and DCF803-0060

- · Single-phase power stack
- · Half-controlled thyristor/diode bridge (1-Q).
- Built-in line chokes.
- Microprocessor control with the control electronics being supplied separately (115 ... 230 V/1-ph).
- Construction and components have been designed for an insulation voltage of 690 V<sub>AC</sub>.
- Field output voltage U<sub>4</sub>:

$$U_A \le U_V * \left(\frac{100\% + TOL}{100\%}\right) * 0.9$$

TOL = tolerance of line voltage in % U,, = Line voltage, U. = Field voltage

· Recommendation:

 $U_{\Delta} = 0.6 \text{ to } 0.8 * U_{V} \text{ or } U_{V} = 1.25 \text{ to } 1.7 * U_{\Delta}$ 

### DCF804-0050 and DCF804-0060

- · Single-phase power stack
- Fully-controlled antiparallel thyristor bridges (4-Q)
- · This unit offers field reversal as well as fast-response excitation / de-excitation.
- · In the steady-state condition, the fully-controlled bridge runs in half-controlled mode so as to keep the voltage ripple as low as possible. With a quickly alternating field current, the bridge runs in fully-controlled mode.
- Same design as DCF803-0050.
- · Built-in line chokes.


### Autotransformer for single-phase field supply.

for field current I <sub>F</sub>	Autotransformer type 50/60 Hz		
	U <sub>prim</sub> = ≤ 500 V		
≤ 6 A	T 3.01	x **	×
≤ 12 A	T 3.02	x **	х
≤ 16 A	T 3.03	x **	x
≤ 30 A	T 3.04	x *	x
≤ 50 A	T 3.05		х
≤ 60 A	on request		х
	U <sub>prim</sub> = ≤ 600 V		
≤ 6 A	T 3.11	x **	x
≤ 12 A	T 3.12	x **	x
≤ 16 A	T 3.13	x **	х
	U <sub>prim</sub> = ≤ 690 V		
≤ 30 A	T 3.14		х
≤ 50 A	T 3.15		х
≤ 60 A	on request		х

<sup>\*</sup> three-phase operation recommended

<sup>\*\*</sup> requires line choke ND 30, ND402, or KLR45CTB





02

### DCS880 exciter modules

### DCS880-S01, DCS880-S02

This converter can also be used for field exciter operation, an additional overvoltage protection unit is required. It provides field currents from 20 A up to 520 A unipolar (2-Q) and bipolar (4-Q) for field reversal function.

- Field output voltage  $U_A$  respectively  $U_{dmax 2-Q}$ : see table on page 13
- · Recommendation:

 $U_{\Delta} = 0.5 \text{ to } 1.1 * U_{V} \text{ or } U_{V} = 0.9 \text{ to } 2.0 * U_{\Delta}$ 

• The large field supply converters DCS880-S01/S02 need a separate active overvoltage protection unit DCF506 for protecting the power part against inadmissibly high

The overvoltage protection unit DCF506 is suitable for 2-Q converters DCS880-S01 and for 4-Q converters DCS880-S02.

• DCSLink communication board +S521 required.

### Assignment of field supply converter to overvoltage protection unit

Field supply converter for motor fields	Overvoltage protection
DCS880-S0x-0020-51	_
	DCF506-0140-51
DCS880-S0x-0140-51	_
DCS880-S0x-0200-51	
	DCF506-0520-51
DCS880-S0x-0520-51 *	

<sup>\*</sup> max field current 520 A





## **Fuse connections**

Recommended fuse connections see tables below.

### Semiconductor type F1 fuses and fuse holders for AC and DC power lines (DCS880-S01 / DCS880-S02)

The converter units are subdivided into two groups:


- Unit sizes H1, H2, H3 and H4 with rated currents up to 1000 A require external line fuses.
- In unit sizes H5, H6, H7 and H8 with rated currents of 900 A to 5200 A, the semiconductor fuses are installed internally (no additional external semiconductor fuses are needed).

The table assigns the AC fuse types to the converter types. In case the converter should be equipped with DC fuses according to the hints use the same type of fuse used on the AC side now in the plus and minus line (only for sizes H1 ... H4). Blade type fuses are used for all the converters of construction type H1 ... H4 except the converters (610 A, 680 A, 740 A, 820 A, 900 A, 1000 A)

Type of converter		Туре	Fuse holder	Туре	Fuse holder
2-Q Converter	4-Q Converter		North America		Worldwide
DCS880-S01-0020-05	DCS880-S02-0025-05	FWP-50B	1BS101	50A 660V UR	OFAX 00 S3L
DCS880-S01-0045-05	DCS880-S02-0050-05	FWP-80B	1BS101	80A 660V UR	OFAX 00 S3L
DCS880-S01-0065-05	DCS880-S02-0075-05	FWP-125A	1BS103	125A 660V UR	OFAX 00 S3L
DCS880-S01-0090-05	DCS880-S02-0100-05	FWP-125A	1BS103	125A 660V UR	OFAX 00 S3L
DCS880-S01-0135-05	DCS880-S02-0150-05	FWP-200A	1BS103	200A 660V UR	OFAX 1 S3
DCS880-S01-0180-05	DCS880-S02-0200-05	FWP-250A	1BS103	250A 660V UR	OFAX 1 S3
DCS880-S01-0225-05	DCS880-S02-0250-05	FWP-300A	1BS103	315A 660V UR	OFAX 2 S3
DCS880-S01-0270-05	DCS880-S02-0300-05	FWP-500A	1BS104	500A 660V UR	OFAX 3 S3
DCS880-S01-0315-05	DCS880-S02-0350-05	FWP-500A	1BS104	500A 660V UR	OFAX 3 S3
DCS880-S01-0405-05	DCS880-S02-0450-05	FWP-700A	See Note 1	700A 660V UR	OFAX 3 S3
DCS880-S01-0470-05	DCS880-S02-0520-05	FWP-700A	See Note 1	700A 660V UR	OFAX 3 S3
DCS880-S01-0610-05	DCS880-S02-0680-05	FWP-900A	See Note 1	900A 660V UR	3 x 170H 3006
DCS880-S01-0740-05	DCS880-S02-0820-05	FWP-900A	See Note 1	900A 660V UR	3 x 170H 3006
DCS880-S01-0900-05	DCS880-S02-1000-05	FWP-1200A	See Note 1	1250A 660V UR	3 x 170H 3006
DCS880-S01-0290-06	DCS880-S02-0320-06	FWP-500A	1BS104	500A 660V UR	OFAX 3 S3
DCS880-S01-0590-06	DCS880-S02-0650-06	FWP-900A	See Note 1	900A 660V UR	3 x 170H 3006

Fuses and fuse holders (details see Technical Data)

Fuses are available directly from Bussmann. For information, see their web site at www.bussmann.com. Recommended fuses are semiconductor type fuses. See hardware manual for more information.

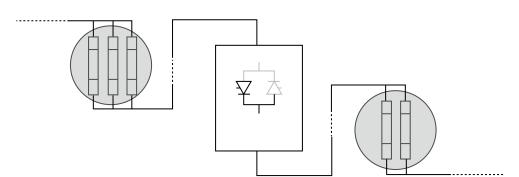


# **Line reactors L1**

Unit Type		KLR 1.5%	KLR 3%	KLR 5%
		impedance	impedance	impedance
2-Q Converter	4-Q Converter			
500 Vdc				
DCS880-S01-0020-05	DCS880-S02-0025-05	KLR21BTB	KLR21ATB	KLR21CTB
DCS880-S01-0045-05	DCS880-S02-0050-05	KLR45BTB	KLR45ATB	KLR45CTB
DCS880-S01-0065-05	DCS880-S02-0075-05	KLR80BCB	KLR80ACB	KLR80CCB
DCS880-S01-0090-05	DCS880-S02-0100-05	KLR110BCB	KLR110ACB	KLR110CCB
DCS880-S01-0135-05	DCS880-S02-0150-05	KLR160BCB	KLR160ACB	KLR160CCB
DCS880-S01-0180-05	DCS880-S02-0200-05	KLR200BCB	KLR200ACB	KLR200CCB
DCS880-S01-0225-05		KLR200BCB	KLR200ACB	KLR200CCB
	DCS880-S02-0250-05	KLR250BCB	KLR250ACB	KLR250CCB
DCS880-S01-0270-05	DCS880-S02-0300-05	KLR300BCB	KLR300ACB	KLR300CCB
DCS880-S01-0315-05	DCS880-S02-0350-05	KLR360BCB	KLR360ACB	KLR360CCB
DCS880-S01-0405-05		KLR360BCB	KLR360ACB	KLR360CCB
DCS880-S01-0470-05	DCS880-S02-0450-05	KLR420BCB	KLR420ACB	KLR420CCB
	DCS880-S02-0520-05	KLR480BCB	KLR480ACB	KLR480CCB
DCS880-S01-0610-05	DCS880-S02-0680-05	KLR600BCB	KLR600ACB	KLR600CCB
DCS880-S01-0740-05	DCS880-S02-0820-05	KLR750BCB	KLR750ACB	KLR750CCB
DCS880-S01-0900-05	DCS880-S02-1000-05	KLR850BCB	KLR850ACB	KLR850CCB
DCS880-S01-1190-05	DCS880-S02-1190-05	KLR1100BCB	KLR1100ACB	KLR1100CCB
DCS880-S01-1200-05	DCS880-S02-1200-05	KLR1100BCB	KLR1100ACB	KLR1100CCB
DCS880-S01-1500-05	DCS880-S02-1500-05	KLR1250BCB	KLR1250ACB	KLR1250CCB
600 Vdc				
DCS880-S01-0290-06		KLR250BCB	KLR250DCB	KLR250ECB
	DCS880-S02-0320-06	KLR300BCB	KLR300DCB	KLR300ECB
DCS880-S01-0590-06	DCS880-S02-0650-06	KLR600BCB	KLR600DCB	KLR600ECB
DCS880-S01-0900-06	DCS880-S02-0900-06	KLR750BCB	KLR750DCB	KLR750ECB
DCS880-S01-1500-06	DCS880-S02-1500-06	KLR1250BCB	KLR1250DCB	KLR1250ECB

\* with forced cooling

Recommended AC Line Reactors are available directly from TCI. For information, see their web page www.transcoil.com. Line reactor selection is determined by the drive power and system requirements. A minimum impedence of 1% is required unless an input isolation transfomer is provided for each drive (1 to 5% impedence).

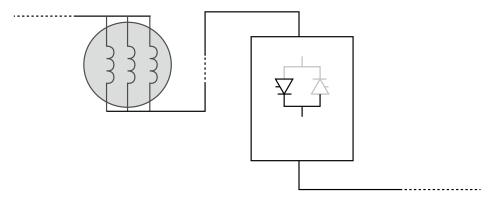


Distributed by Gross Automation | +1 (262) 252-1600. | ABBDrivessales@grossautomation.com

## **Contactors**

Unit Type		AC Input Contactors 3-Pol (NO)	DC Output Contactors 2-Pol (NO)	Dynamic Brake Contactors 2-NO &1-NC
2-Q Converter	4-Q Converter		· · · · · · · · · · · · · · · · · · ·	
500 Vdc				
DCS880-S01-0020-05	DCS880-S02-0025-05	A12-30-11-84	DA75-20-11-84	DA75-21-21-84
DCS880-S01-0045-05	DCS880-S02-0050-05	A30-30-11-84	DA75-20-11-84	DA75-21-21-84
DCS880-S01-0065-05	DCS880-S02-0075-05	A50-30-11-84	EHDB220C2P-1L	EHDB220C-1L
DCS880-S01-0090-05	DCS880-S02-0100-05	A75-30-11-84	EHDB220C2P-1L	EHDB220C-1L
DCS880-S01-0135-05	DCS880-S02-0150-05	A110-30-11-84	EHDB220C2P-1L	EHDB220C-1L
DCS880-S01-0180-05	DCS880-S02-0200-05	A145-30-11-84	EHDB220C2P-1L	EHDB220C-1L
DCS880-S01-0225-05	DCS880-S02-0250-05	A210-30-11-84	EHDB280C2P-1L	EHDB280C-1L
DCS880-S01-0270-05		A210-30-11-84	EHDB280C2P-1L	EHDB280C-1L
	DCS880-S02-0300-05	A260-30-11-84	EHDB360C2P-1L	EHDB360C-1L
DCS880-S01-0315-05	DCS880-S02-0350-05	A260-30-11-84	EHDB360C2P-1L	EHDB360C-1L
DCS880-S01-0405-05		AF400-30-11-70	EHDB520C2P-1L	EHDB520C-1L
DCS880-S01-0470-05	DCS880-S02-0450-05	AF400-30-11-70	EHDB520C2P-1L	EHDB520C-1L
	DCS880-S02-0520-05	AF400-30-11-70	EHDB520C2P-1L	EHDB520C-1L
DCS880-S01-0610-05		AF580-30-11-70	EHDB650C2P-1L	EHDB650C-1L
	DCS880-S02-0680-05	AF580-30-11-70	EHDB800C2P-1L	EHDB800C-1L
DCS880-S01-0740-05		AF750-30-11-70	EHDB800C2P-1L	EHDB800C-1L
	DCS880-S02-0820-05	AF750-30-11-70	EHDB960C2P-1L	EHDB960C-1L
DCS880-S01-0900-05		AF1350-30-11-70	EHDB960C2P-1L	EHDB960C-1L
	DCS880-S02-1000-05	AF1350-30-11-70	Bar	Bar
DCS880-S01-1190-05	DCS880-S02-1190-05	AF1350-30-11-70	Bar	Bar
DCS880-S01-1200-05	DCS880-S02-1200-05	AF1350-30-11-70	Bar	Bar
DCS880-S01-1500-05	DCS880-S02-1500-05	AF1650-30-11-70	Bar	Bar
600 Vdc				
DCS880-S01-0290-06	DCS880-S02-0320-06	A260-30-11-84	EHDB360C2P-1L	EHDB360C-1L
DCS880-S01-0590-06	DCS880-S02-0650-06	AF460-30-11-70	EHDB680C2P-1L	EHDB680C-1L
DCS880-S01-0900-06	DCS880-S02-0900-06	AF750-30-11-70	EHDB960C2P-1L	EHDB960C-1L
DCS880-S01-1500-06	DCS880-S02-1500-06	AF1650-30-11-70	Bar	Bar

AC Input Contactors: Contactors have 120Vac / 50-60Hz coil with 1-NO and 1-NC aux. contact. DC Output and Dynamic Brake Contactors: Contactors have 120Vac / 60Hz coil with1-NO and 1-NC aux. contact.

Either an AC or DC contactor is required, but not both.

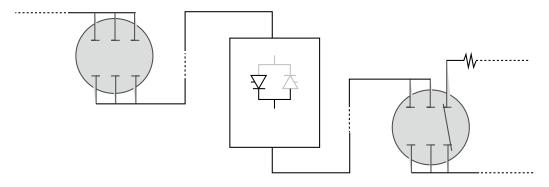


Distributed by Gross Automation | +1 (262) 252-1600. | ABBDrivessales@grossautomation.com

# **High power configurations**

Converters generate harmonics at the mains. To reduce it is possible to use 12-pulse configuration. Low current harmonic level (THD\_cur) results in a minimum voltage distortion (THD\_volt) at the PCC.

	5th	7th	11th	13th	THD_cur
6-pulse	21 %	14 %	9 %	7 %	36 %
12-pulse	1 %	1%	6%	7 %	11 %

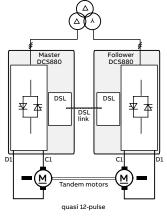

# Quasi 12-pulse Master-Follower configuration

The converters are fed by a 12-pulse transformer with separated secondary windings whose phase positions differ by 30°el.


This configuration delivers the same advantages concerning harmonics to the network as a standard 12-pulse application (see next item), but no T-reactor is needed.

# 

# 12-pulse parallel, serial or sequential configuration

12-pulse systems are used for reduced line harmonics, reduced motor noise level, enlarged output current or voltage of converter system. Only the 11th and 13th, the 23rd and 25th, the 35th a.s.o. are existing. The harmonics on the DC side are reduced too, which gives a higher efficiency. It is not possible to connect two 12-pulse systems (2 converters, T-reactor and 1 motor) to one 12-pulse transformer.

For more information, please see manual 12-pulse operation.



Low output voltages with optimized power factory are realized by dedicated transformers.

### Quasi 12-pulse


Frame size	H1 ~ H5	Н6	H7	Н8
max AC voltage	525 V	690 V	800 V	1190 V
typical DC voltage 2Q / 4Q	610 V / 545 V	800 V / 720 V	915 V / 820 V	1380 V / 1235 V


### 12-pulse parallel

Frame size	H1 ~ H5	H6	H7	Н8
max AC voltage	525 V	690 V	800 V	1190 V
typical DC voltage 2Q / 4Q	610 V / 545 V	800 V / 720 V	915 V / 820 V	1380 V / 1235 V

### 12-pulse serial/sequential

Frame size	H1 ~ H5	Н6	H7	Н8
max AC voltage	not usable	2 x 350 V	2 x 600 V	2 x 750 V
typical DC voltage 2Q / 4Q	not usable	800 V / 720 V	1380 V / 1235 V	1500 V / 1700 V

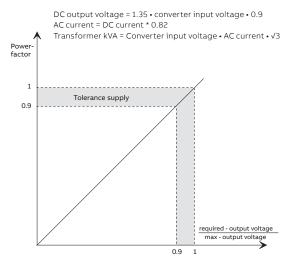

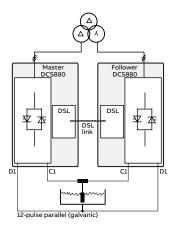

# A lifetime of peak performance

You're in control of every life cycle phase of your drives. At the heart of drive services is a four-phase product life cycle management model. This model defines the services recommended and available throughout drives lifespan.

Now it's easy for you to see the exact service and maintenance available for your drives.

### ABB drives life cycle phases explained:

	Active	Classic	Limited	Obsolete
	Full range of life cycle serv	vices and support	Limited range of life cycle services and support	Replacement and end-of-life services
Product	Product is in active sales and manufacturing phase.	Serial production has ceased. Product may be available for plant extensions, as a spare part or for installed base renewal.	Product is no longer available.	Product is no longer available.
Services	Full range of life cycle services is available.	Full range of life cycle services is available.  Product enhancements may be available through upgrade and retrofit solutions.	Limited range of life cycle services is available.  Spare parts availability is limited to available stock.	Replacement and end-of-life services are available.

### **Keeping you informed**

We notify you every step of the way using life cycle status statements and announcements.

Your benefit is clear information about your drives' status and precise services available. It helps you plan the preferred service actions ahead of time and make sure that continuous support is always available.

### Step 1

### Life Cycle Status Announcement

Provides early information about the upcoming life cycle phase change and how it affects the availability of services.

### Step 2

### **Life Cycle Status Statement**

Provides information about the drive's current life cycle status, availability of product and services, life cycle plan and recommended actions.



# Services to match your needs

Your service needs depend on your operation, life cycle of your equipment and business priorities. We have identified our customers' four most common needs and defined service options to satisfy them. What is your choice to keep your drives at peak performance?

### Is uptime your priority?

Keep your drives running with precisely planned and executed maintenance.

### Example services include:

- · Life Cycle Assessment
- · Installation and Commissioning
- Spare Parts
- Preventive Maintenance
- Reconditioning
- ABB Drive Care agreement
- · Drive Exchange



**Operational efficiency** 

# Is rapid response a key consideration?

If your drives require immediate action, our global network is at your service.

### Example services include:

- Technical Support
- On-site Repair
- Remote Support
- Response time agreements
- Training



Rapid response



# **Drives service**

# Your choice, your future

# The future of your drives depends on the service you choose.

Whatever you choose, it should be a well-informed decision. No guesswork. We have the expertise and experience to help you find and implement the right service for your drive equipment. You can start by asking yourself these two critical questions:

- · Why should my drive be serviced?
- What would my optimal service options be?

From here, you have our guidance and full support along the course you take, throughout the entire lifetime of your drives.

### Your choice, your business efficiency

ABB Drive Care agreement lets you focus on your core business. A selection of predefined service options matching your needs provides optimal, more reliable performance, extended drive lifetime and improved cost control. So you can reduce the risk of unplanned downtime and find it easier to budget for maintenance.

### We can help you more by knowing where you are!


Register your drive at www.abb.com/drivereg for extended warranty options and other benefits.

# Need to extend your assets' lifetime?

Maximize your drive's lifetime with our services.

### Example services include:

- · Life Cycle Assessment
- Upgrades, Retrofits and Modernization
- · Replacement, Disposal and Recycling



Life cycle management

# Is performance most critical to your operation?

Get optimal performance out of your machinery and systems.

### Example services include:

- Advanced services
- · Engineering and Consulting
- Inspection and Diagnostics
- Upgrades, Retrofits and Modernization
- Workshop Repair
- · Tailored services



Performance improvement

# **ABB Automation products**



### **DCS550**

ABB offers the machine building industry a DC drive which combines state-of-the-art drive technology with proven DC technology. The new converter series is suited both for new installations and retrofitting, due to its robust technology and compact design.

Integrated "Winder", programmability and a powerful field converter provide machine manufacturers with a maximum of flexibility in terms of machine integration.



### AC500

ABB's powerful flagship PLC offering provides wide range of performance levels and scalability within a single simple concept where most competitors require multiple product ranges to deliver similar functionality.



### **Programmability**

Automation Builder integrates the engineering and maintenance for PLC, drives, motion, HMI and robotics. It complies with the IEC 61131-3 standard offering all five IEC programming languages for PLC and drive configuration. Automation Builder supports a number of languages and comes with new libraries, FTP functions, SMTP, SNTP, smart diagnostics and debugging capabilities.



### DC motors

ABB's DMI generation of DC motors turns many ingrained concepts upside down.

Thanks to creative innovations and state-ofthe-art computerized optimization of technical solutions that earlier were considered to have reached the "design limits", a completely new generation of DC motors has evolved.

The DMI generation of DC motors offers completely new opportunities for improving productivity as a result of the substantially faster speed control. At the same time, the investment costs are lowered. Thanks to the precise optimization of the electrical and mechanical characteristics and the wide speed range, oversizing of motor drives to achieve the desired speed range is unneces-



ABB's DCT880 offers their customers a thyristor power controller for the accurate control of ohmic or inductive heating elements and infrared radiators in glass, plastic, annealing, drying, melting or heating applications. DCT880 controllers are available in eight compact sizes, ranging from 20 A to 4,200 A.



The integrated three-phase current measurement allows for implementing all load configurations from star, delta, single-and two-phase all the way to reactive-power optimized transformer control.

### DCS880-R

The DCS880-R Rebuild Kit replaces the control electronics of an existing DC drive. All power components, including the thyristors, are retained. The DCS880-R Rebuild Kit is suitable for almost all existing drives from different manufacturers. In addition, ABB has developed specifically tailored solutions for some existing types of converter: this is a cost-efficient option for DC Drive revamping



### ACS500-S

A PLC based modular automation solution that makes it easier than before to mix and match standard and safety I/O modules to expertly meet your safety requirements in all functional safety applications. "Extreme conditions" version is also offered.



### All-compatible drives portfolio

The all-compatible drives share the same architecture; firmware platform, tools, user interfaces and options. Yet, there is an optimal drive from the smallest water pump to the biggest cement kiln, and everything in the between. When you have learned to use one drive it is easy use the other drives in the portfolio.



### Jokab safety products


ABB Jokab Safety offers an extensive range of innovative products and solutions for machine safety systems. It is represented in standardization organisations for machine safety and works daily with the practical application of safety requirements in combination with production requirements.



Distributed by Gross Automation | +1 (262) 252-1600. | ABBDrivessales@grossautomation.com


# Save time, ease troubleshooting and improve drive performance with ABB smartphone apps

## Better connectivity and user experience with Drivetune

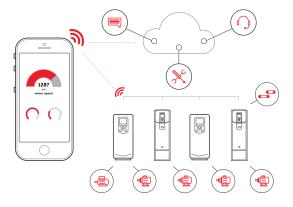

Easy and fast access to product information and support

### Manage your drives and the process lines and machines they control

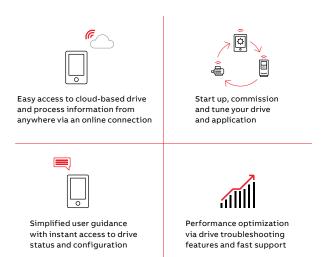


## Services and support on the go with Drivebase



Search for support documents and contacts

### Maintain and service all your installed drives on one or multiple sites

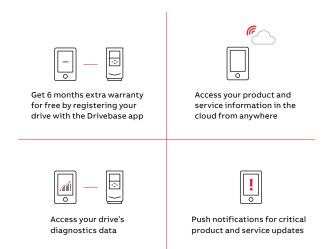

## Access information anywhere


Download the apps using the QR codes below or directly from the app stores





















### Plus codes

Option	Option code	Description	
ACS-AP-I	standard	built-in	
no ACS-AP-I	0J404	No Control panel	
ACS-AP-W	+J429	Bluetooth Control panel	
DPI-H01	+J428	daisy-chain option	
FDNA-01	+K451	Fieldbus DeviceNet	
FPBA-01	+K454	Fieldbus PROFIBUS	
FCAN-01	+K457	Fieldbus CANOpen	
FSCA-01	+K458	Fieldbus Modbus	
FCNA-01	+K462	Fieldbus ControlNet	
FECA-01	+K469	Fieldbus EtherCat	
FEPL-02	+K470	Fieldbus Ethernet POWERLINK	
FENA-11	+K473	Ethernet/IP, Modbus/TCP, Profinet	
FENA-21	+K475	Ethernet/IP, Modbus/TCP, Profinet	
FIO-11	+L500	Analog I/O Extension	
FIO-01	+L501	Digital I/O Extension	
FAIO-01	+L525	Analog I/O Extension	
FDIO-01	+L526	Digital I/O Extension 2,	
FPTC-01	+L536	Thermistor protection module	
FEN-31	+L502	HTL Encoder Interface	
FEN-21	+L516	Resolver Interface	
FEN-01	+L517	TTL Encoder interface	
FEN-11	+L518	Absolute Encoder Interafce	
FDCO-01	+L503	DDCS communication 10/10 MBd	
FDCO-02	+L508	DDCS communication 5/10 MBd	
Application programming	+\$551	Memory unit including drive application programming license	
no OnBoard field exciter	0S163	Excludes OnBoard field exciter (H1 H4)	
FEX-425 int	+\$164	H5 and H6 internal 25 A exciter	
SDCS-DSL-H10	+\$521	1 DCSLink channel, 0 channels optical power link	
SDCS-DSL-H12	+\$522	1 DCSLink channel, 2 channels optical power link	
SDCS-DSL-H14	+\$523	1 DCSLink channel, 4 channels optical power link	
FSO-21	+Q972	Functional Safety Option	
FSE-31	+L521	Functional Safety Encoder	

DC DRIVES 45

### Notes

### **Notes**

### Additional information

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB AG.







www.abb.com/dc-drives

